




# Instruction Manual

## MR-166US, -185US, -200US Liquid-Ring Pump

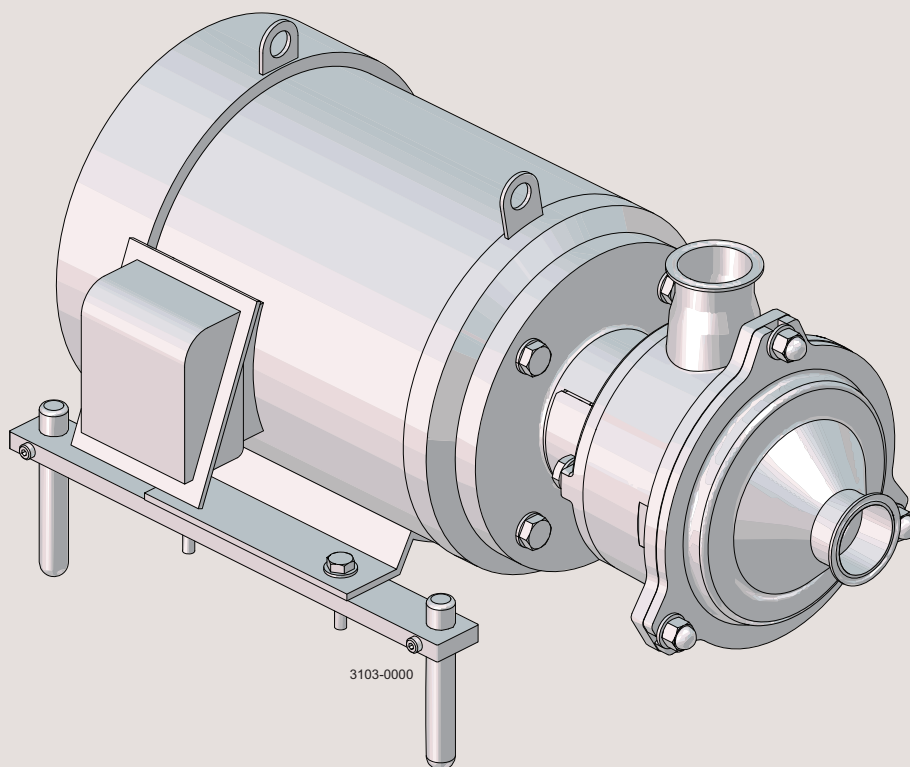

ESE00675-ENUS3

2016-03

Original manual



*The information herein is correct at the time of issue but may be subject to change without prior notice*

<b>1. Safety</b>	<b>4</b>
1.1. Important information	4
1.2. Warning signs	4
1.3. Safety precautions	5
<b>2. Installation</b>	<b>6</b>
2.1. Unpacking/delivery	6
2.2. Installation/Pre-use check - MR-166US	7
2.3. Installation/Pre-use check - MR-185US, -200US	9
2.4. Recycling information	11
<b>3. Operation</b>	<b>12</b>
3.1. Operation/Control	12
3.2. Trouble shooting and repair	13
3.3. Recommended cleaning	14
<b>4. Maintenance</b>	<b>15</b>
4.1. General maintenance	15
4.2. Dismantling of pump MR-166US	17
4.3. Dismantling of pump MR-185US and MR-200US	20
4.4. Assembly of pump MR-166US	23
4.5. Assembly of pump MR-185US and MR-200US	27
4.6. Cleaning Procedure	30
<b>5. Technical data</b>	<b>31</b>
5.1. Technical data	31
5.2. Torque Specifications	32
5.3. Noise emission	33
<b>6. Parts list and service kits</b>	<b>34</b>
6.1. Drawings MR-166US	34
6.2. Drawings MR-185US, -200US	35
6.3. MR-166US	36
6.4. MR-185US, -200US	38

# 1 Safety

---

*Unsafe practices and other important information are emphasized in this manual.  
Warnings are emphasized by means of special signs. All warnings in the manual are summarized on this page.  
Pay special attention to the instructions below so that severe personal injury or damage to the pump are avoided.*

---

## 1.1 Important information

---

**Always read the manual before using the pump!**

**WARNING**  
Indicates that special procedures must be followed to avoid serious personal injury.


**CAUTION**  
Indicates that special procedures must be followed to avoid damage to the pump.

**NOTE**  
Indicates important information to simplify or clarify procedures.

---

## 1.2 Warning signs

---

General warning:	
Dangerous electrical voltage:	
Caustic agents:	

---

*Unsafe practices and other important information are emphasized in this manual.  
Warnings are emphasized by means of special signs. All warnings in the manual are summarized on this page.  
Pay special attention to the instructions below so that severe personal injury or damage to the pump are avoided.*

## 1.3 Safety precautions

### Installation:

**Always** read the technical data thoroughly. (See chapter 5 Technical data)

**Never** stick your fingers or any tool through the adaptor or the drain hole in the pump casing when the pump is running.

**Never** test the direction of rotation with liquid in the pump.

**Always** have the pump electrically connected by authorized personnel. (See the motor instruction)

**Always** disconnect the power supply when servicing the pump.



### Operation:

**Always** read the technical data thoroughly. (See chapter 5 Technical data)

**Never** touch the pump or the pipelines when pumping hot liquids or when sterilizing.

**Never** run the pump with both the suction side and the pressure side blocked.

**Never** run the pump when partially installed or not completely assembled.

**Necessary** precautions must be taken if leakage occurs as this can lead to hazardous situations.

**Always** handle lye and acid with great care.

**Never** use the pump for products not mentioned in Alfa Laval pump selection program.

Alfa Laval pump selection program can be acquired from your local Alfa Laval sales company.



### Maintenance:

**Always** read the technical data thoroughly. (See chapter 5 Technical data )

**Never** service the pump when it is hot.

**Never** service the pump if pressurized.

**Always** use Alfa Laval genuine spare parts.



### Motors with grease nipples:

Remember lubrication according to information plate/label on the motor.

**Always** disconnect the power supply when servicing the pump.



### Transportation:

#### Transportation of the pump or the pump unit:

**Never** lift or elevate in any way other than described in this manual

**Always** drain the pump head and accessories of any liquid

**Always** ensure that no leakage of lubricants can occur

**Always** transport the pump in it's upright position

**Always** ensure that the unit is securely fixed during transportation

**Always** use original packaging or similar during transportation

## 2 Installation

*The instruction manual is part of the delivery. Study the instructions carefully. The pump is available in the following sizes, MR-166US, MR-185US and MR-200US.*

### 2.1 Unpacking/delivery

#### Step 1

##### NOTE


Alfa Laval cannot be held responsible for incorrect unpacking. Inspect the pump for visible transport damages.

##### Check the delivery for:

1. Complete pump, MR-166US, MR-185US or MR-200US.
2. Delivery note.
3. Motor instructions.


#### Step 2

Clean the inlet and the outlet from possible packing materials.

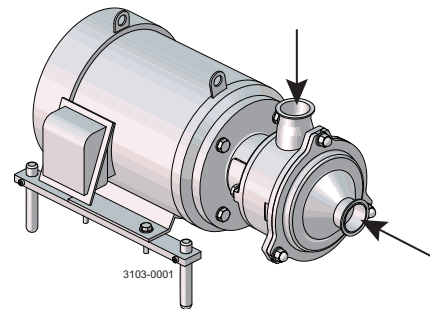


#### Step 3

Avoid damaging the inlet and the outlet.

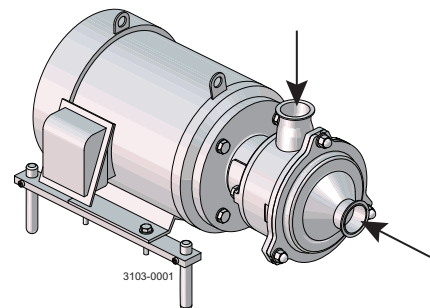

#### Step 4

Always remove the shroud, if fitted, before lifting the pump.

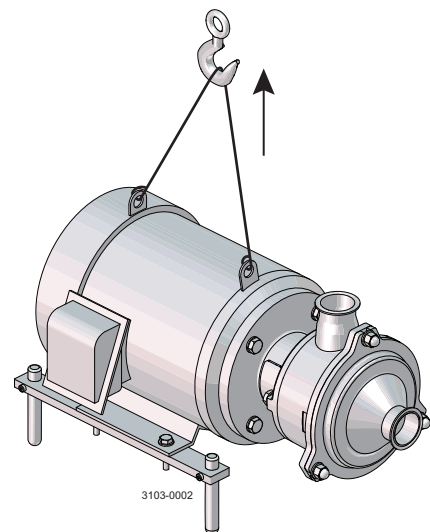

*Study the instructions carefully and pay special attention to the warnings!*

*The direction of rotation of the impeller can be checked by observing the direction of rotation of the motor fan.*

*- See the indication label on the pump.*

### 2.2 Installation/Pre-use check - MR-166US

#### Step 1



**Always** read the technical data thoroughly.

See chapter 4 Maintenance



The pump **must** be electrically connected by authorized (see the motor instructions)




**Never** stick your fingers or any tool through the adaptor or the drain hole in the pump casing when the pump is running.

#### NOTE

Alfa Laval cannot be held responsible for incorrect installation.


#### Step 2

Ensure at least 1.64 ft clearance around the pump.

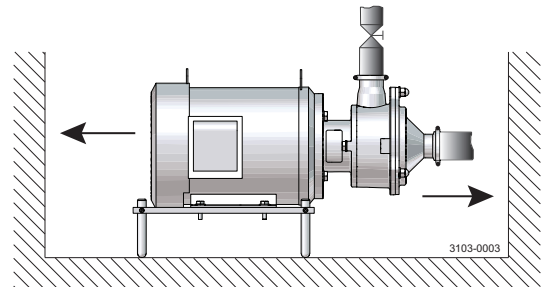

#### Step 3

1. Ensure that the pipelines are correctly routed.
2. Ensure that connections are tight.

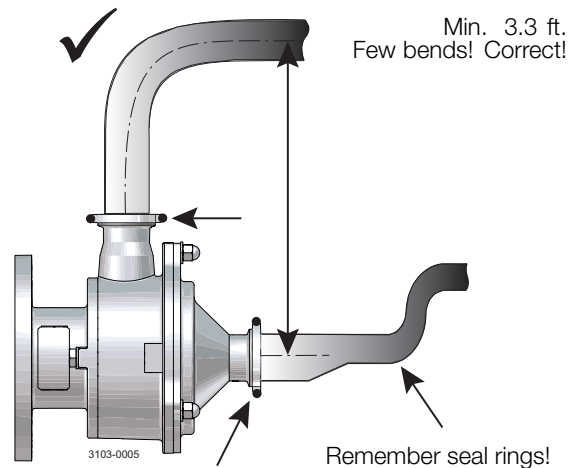

## 2 Installation

*Study the instructions carefully and pay special attention to the warnings!*

*The direction of rotation of the impeller can be checked by observing the direction of rotation of the motor fan.*


*- See the indication label on the pump.*

### Step 4

Avoid stressing the pump.

Pay special attention to:

- Vibrations.
- Thermal expansion of the tubes.
- Excessive welding.
- Overloading of the pipelines.

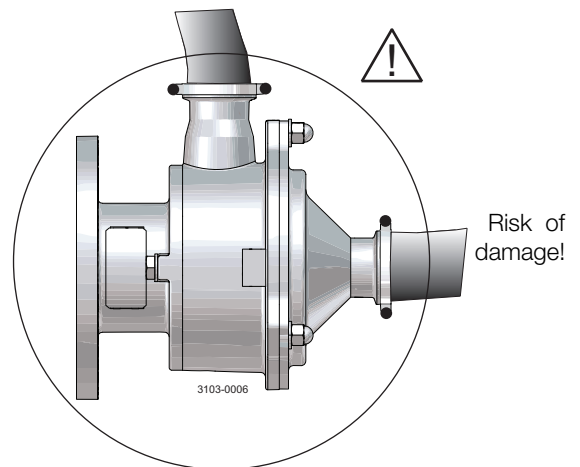

### Step 5




**Never** test the direction of rotation with liquid in the pump.

**Pre-use check:**

1. Start and stop the motor momentarily.
2. Ensure that the direction of rotation of the motor is **counterclockwise** as viewed from the back of the motor.

Correct!

See the indication label!

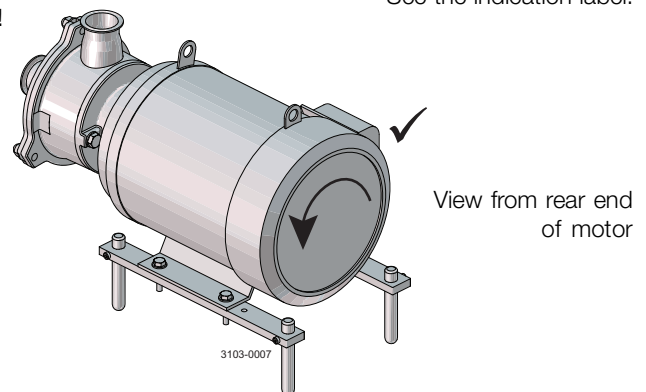



*Study the instructions carefully and pay special attention to the warnings!*

*The direction of rotation of the impeller can be checked by observing the direction of rotation of the motor fan.*

*- See the indication label on the pump.*

### 2.3 Installation/Pre-use check - MR-185US, -200US

#### Step 1



**Always** read the technical data thoroughly.



**Never** stick your fingers or any tool through the adaptor or the drain hole in the pump casing when the pump is running.




**Always** have the pump electrically connected by authorised personnel.

#### NOTE

Alfa Laval cannot be held responsible for incorrect installation.


#### Step 2

Ensure at least 1.64 ft clearance around the pump.

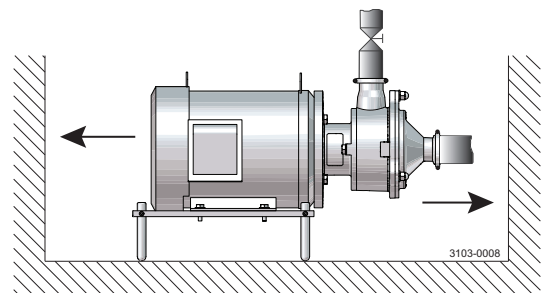

#### Step 3

1. Ensure that pipelines are routed correctly.
2. Ensure that connections are tight.

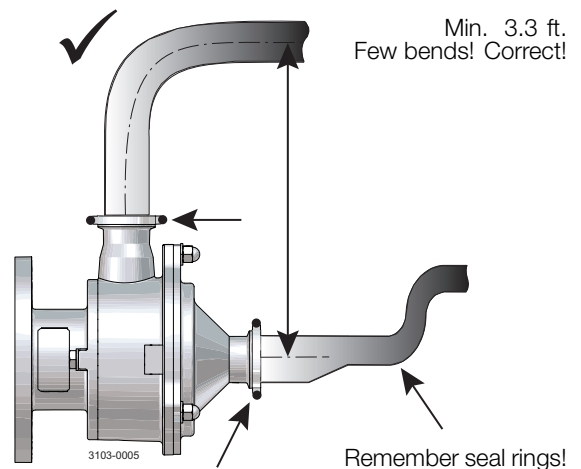

## 2 Installation

*Study the instructions carefully and pay special attention to the warnings!*

*The direction of rotation of the impeller can be checked by observing the direction of rotation of the motor fan.*


*- See the indication label on the pump.*

### Step 4

Avoid stressing the pump.

Pay special attention to:

- Vibrations.
- Thermal expansion of the tubes.
- Excessive welding.
- Overloading of the pipelines.

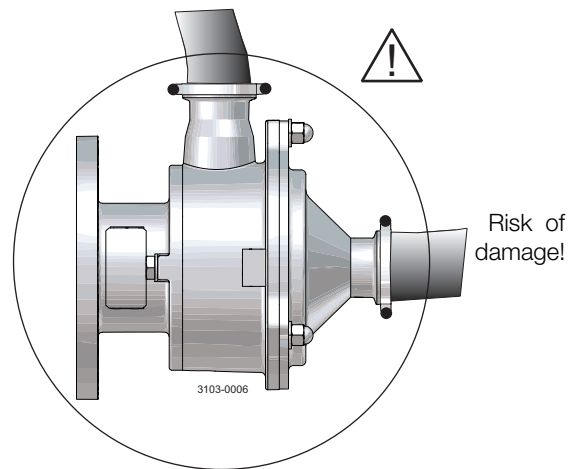

### Step 5




**Never** test the direction of rotation with liquid in the pump.

**Pre-use check:**

1. Start and stop the motor momentarily.
2. Ensure that the direction of rotation of the motor is **clockwise** as viewed from the back of the motor.

Correct!

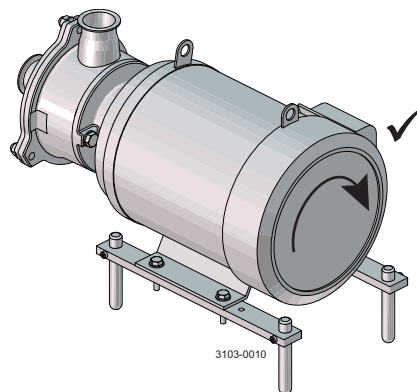

See the indication label!

View from rear end of motor

*Study the instructions carefully and pay special attention to the warnings!*

*The direction of rotation of the impeller can be checked by observing the direction of rotation of the motor fan.*

*- See the indication label on the pump.*

---

### 2.4 Recycling information

---

#### Recycling information

- **Unpacking**

- Packing material consists of wood, plastics, cardboard boxes and in some cases metal straps.
- Wood and cardboard boxes can be reused, recycled or used for energy recovery.
- Plastics should be recycled or burnt at a licensed waste incineration plant.
- Metal straps should be sent for material recycling.

- **Maintenance**

- During maintenance oil and wear parts in the machine are replaced.
- All metal parts should be sent for material recycling.
- Worn out or defective electronic parts should be sent to a licensed handler for material recycling.
- Oil and all non metal wear parts must be taken care of in agreement with local regulations.

- **Scrapping**

- At end of use, the equipment shall be recycled according to relevant, local regulations. Beside the equipment itself, any hazardous residues from the process liquid must be considered and dealt with in a proper manner. When in doubt, or in the absence of local regulations, please contact the local Alfa Laval sales company.
-

## 3 Operation

*Study the instructions carefully and pay special attention to the warnings!*

### 3.1 Operation/Control

#### Step 1



**Always** read the technical data thoroughly.

#### NOTE

Alfa Laval cannot be held responsible for incorrect operation/control.

#### Step 2




**Never** touch the pump or the pipelines when pumping hot liquids or when sterilising.



**Never** stick your fingers or any tool through the drain hole in the pump casing when the pump is running.


**Danger of burns!**  
Rotating parts!

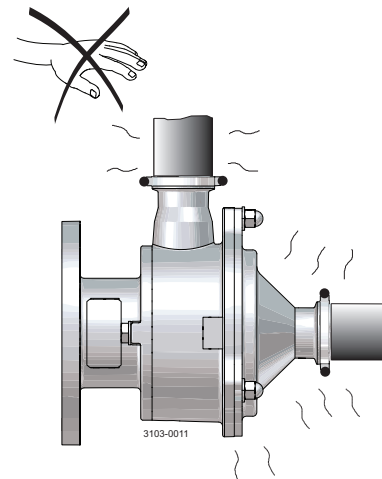


#### Step 3

Never run the pump with both the suction side and the pressure side blocked.

**Danger of explosion!**

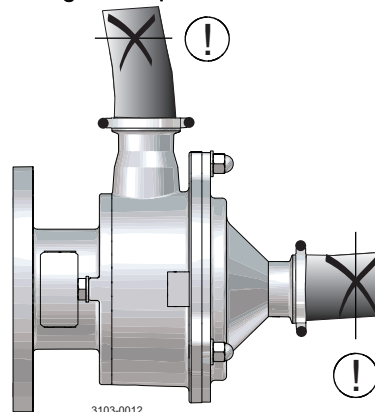

  
**See the  
warning label!**

#### Step 4

##### CAUTION

The shaft seal must not run dry.

##### CAUTION


**Never** throttle the inlet side.

##### Control:

Reduce the capacity by means of:

- Throttling the pressure side of the pump.
- Speed control of the motor.

**Do not allow  
to run dry**

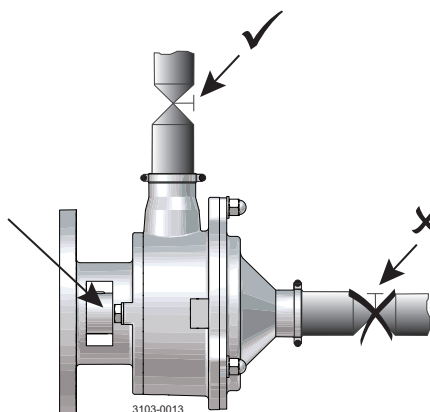

Correct!

Wrong!

*Pay attention to possible faults.  
Study the instructions carefully.*

## 3.2 Trouble shooting and repair

### Step 1

#### NOTE

Study the maintenance instructions carefully before replacing worn parts.

Problem	Cause/result	Repair
Leaking shaft seal	<ul style="list-style-type: none"> <li>- Dry run</li> <li>- Incorrect rubber grade</li> <li>- Abrasive particles in the liquid</li> </ul>	<b>Replace:</b> All wearing parts  <ul style="list-style-type: none"> <li>- Select a different rubber grade</li> <li>- Select stationary and rotating seal ring in Silicon Carbide/Silicon Carbide (only MR-185S, -200S)</li> </ul>
Leaking O-ring seals	Incorrect rubber grade	Change rubber grade

### 3 Operation

The pump is designed for cleaning in place (CIP). CIP = Cleaning In Place.  
Study the instructions carefully and pay special attention to the warnings!  
NaOH = Caustic Soda.  
HNO<sub>3</sub> = Nitric acid.

#### 3.3 Recommended cleaning

##### Step 1



**Always** handle lye and acid with great care.

**Caustic danger!**



Always use rubber gloves!




Always use protective goggles!

##### Step 2



**Never** touch the pump or the pipelines when pumping hot liquids or when sterilising.

**Danger of burns!**

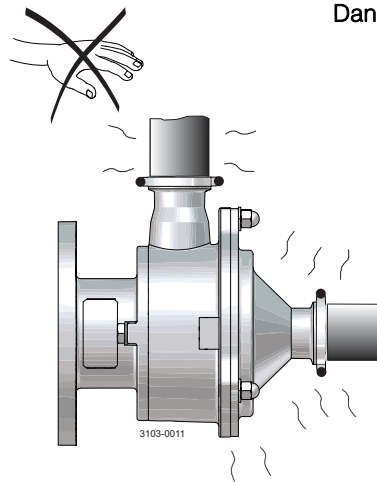

##### Step 3

**Examples of cleaning agents:** Use clean water, free from chlorides.

1. 1% by weight NaOH at 70°C (158°F).

1 kg (2.2 lb) NaOH	+	100 l (26.4 gal) water	= Cleaning agent.
-----------------------	---	---------------------------	-------------------

2.2 l (0.6 gal) 33% NaOH	+	100 l (26.4 gal) water	= Cleaning agent.
-----------------------------	---	---------------------------	-------------------

2. 0.5% by weight HNO<sub>3</sub> at 70°C (158°F).

0.7 l (0.2 gal) 53% HNO <sub>3</sub>	+	100 l (26.4 gal) water	= Cleaning agent.
---	---	---------------------------	-------------------

1. Avoid excessive concentration of the cleaning agent  
⇒ Dose gradually!
2. Adjust the cleaning flow to the process.  
Sterilisation of milk/viscous liquids  
⇒ Increase the cleaning flow!

##### Step 4



**Always** rinse well with clean water after using a cleaning agent.

##### NOTE

The cleaning agents must be stored/disposed of in accordance with current regulations/directives.

**Always rinse!**



Clean water      Cleaning agent

##### Step 5



**Always** store/discharge cleaning agents in accordance with current rules/directives.

Maintain the pump carefully.  
Study the instructions carefully and pay special attention to the warnings!  
Always keep spare shaft seals and rubber seals in stock.  
See separate motor instructions.

### 4.1 General maintenance

#### Step 1



**Always** read the technical data thoroughly.



**Always** disconnect the power supply when servicing the pump.

#### NOTE

All scrap must be stored/discharged in accordance with current rules/directives.


#### Step 2



**Never** service the pump when it is hot.



**Danger of burns!**

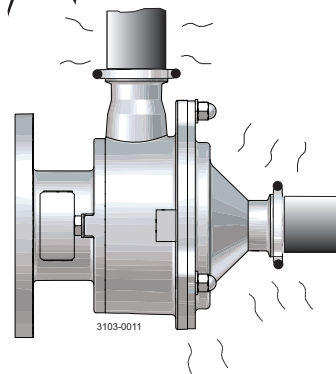


#### Step 3



The pump and the pipelines must **never** be pressurised when the pump is serviced.

**Atmospheric pressure required!**

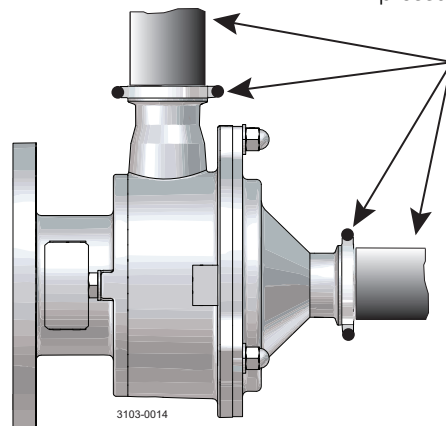

## 4 Maintenance

*Maintain the pump carefully.*

*Study the instructions carefully and pay special attention to the warnings!*

*Always keep spare shaft seals and rubber seals in stock.*

*See separate motor instructions.*

### Step 4

#### CAUTION

**Always** ensure that the impeller rotates smoothly after service.

#### CAUTION

Fit the electrical connections correctly if they have been removed from the motor during service.

**Pay special attention to the warnings!**

1. Rotate impeller (11) through the inlet.
2. Ensure that the impeller does not contact pump casing (9) or casing cover (10).
3. Adjust the impeller position if necessary (see section 4.4 Assembly of pump MR-166US and section 4.5 Assembly of pump MR-185US and MR-200US).

#### Recommended spare parts:

Order service kits from the service kits list

(see chapter 6 Parts list and service kits).

#### Ordering spare parts

Contact your local Alfa Laval sales company.

	Shaft seals	Rubber seals	Motor bearings
Preventive maintenance	<b>Replace after 12 months</b> (one-shift) Complete shaft seal	Replace when replacing the shaft seal	
Maintenance after leakage (leakage normally starts slowly)	Replace at the end of the day: Complete shaft seal	Replace when replacing the shaft seal	
Planned maintenance	<ul style="list-style-type: none"><li>- Regular inspection for leakage and smooth operation</li><li>- Keep a record of the pump</li><li>- Use the statistics for planning of inspections</li></ul> <b>Replace after leakage:</b> Complete shaft seal	Replace when replacing the shaft seal	Yearly inspection is recomm. <ul style="list-style-type: none"><li>- Replace complete bearing if worn</li><li>- Ensure that the bearing is axially locked (See motor instructions)</li></ul>
Lubrication	<b>Before fitting</b> Lubricate the O-rings with silicone grease or silicone oil (not the sealing surfaces)	<b>Before fitting</b> Silicone grease or silicone oil	<b>None</b> The bearings are permanently lubricated




*Study the instructions carefully.  
The items refer to the parts list and service kits section.  
Handle scrap correctly.*

### 4.2 Dismantling of pump MR-166US


#### Step 1

Remove covers (2a)

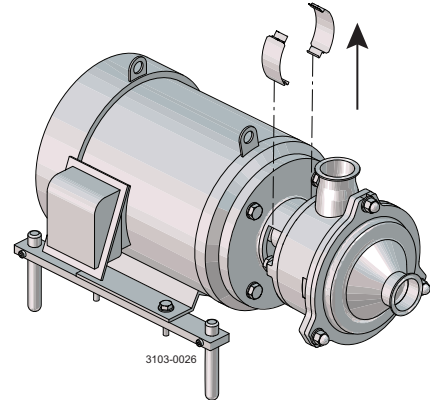


#### Step 2

Remove cap nuts (14), washers (15a) and casing cover (10).

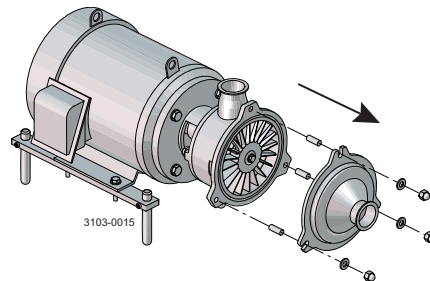


#### Step 3

Remove O-ring (8) from pump casing (9).

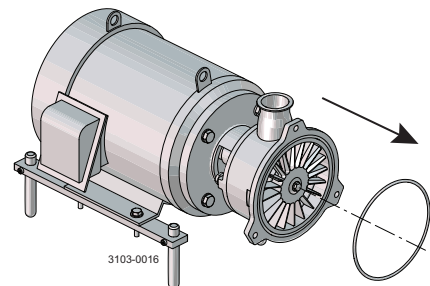

#### Step 4

1. Remove impeller nut **clockwise** (13), (counterhold stub shaft (3)).
2. Remove impeller (11) from the stub shaft.

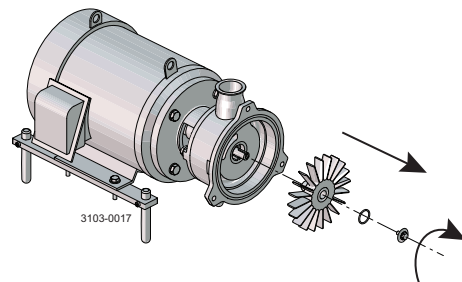

## 4 Maintenance


*Study the instructions carefully.*

*The items refer to the parts list and service kits section.*

*Handle scrap correctly.*


### Step 5

Turn stationary seal ring (29) **counterclockwise** and remove it from pump casing (9) (use the tool supplied).

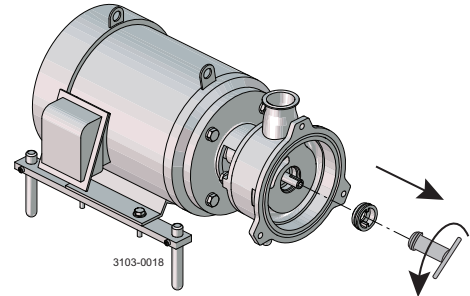

### Step 6

Remove O-ring (30) from stationary seal ring (29).

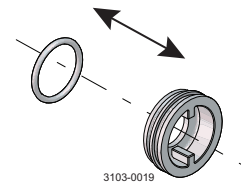


### Step 7

Remove rotating seal ring (28), O-ring (27), washer (26), spacer ring (25) and spring (24) from stub shaft (3).


#### NOTE!

If necessary, place a screwdriver through the hole in pump casing (9) and push the seal parts out.

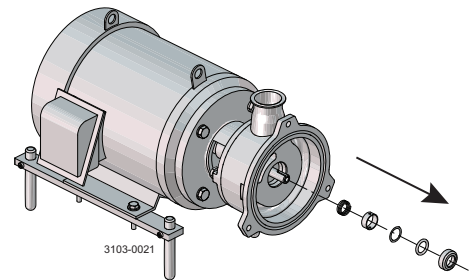


### Step 8

1. Remove screws (45) and washers (46).
2. Remove bracket (2) together with pump casing (9).

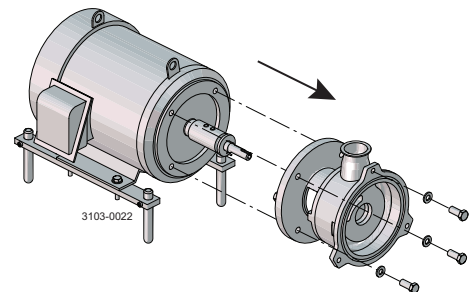

### Step 9


1. Remove screws (40).
2. Remove pump casing (9) from bracket (2).

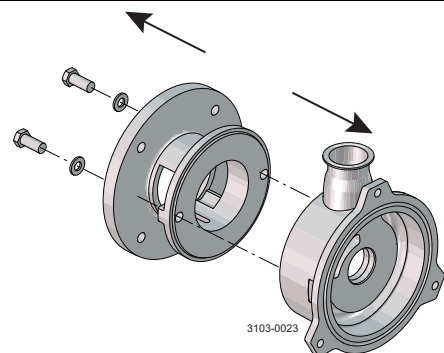

*Study the instructions carefully.  
The items refer to the parts list and service kits section.  
Handle scrap correctly.*


### Step 10

Remove thrower (21) from stub shaft (3).

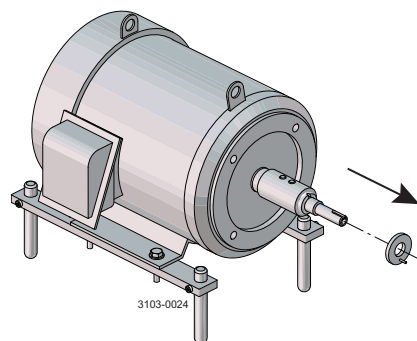

### Step 11

1. Loosen screws (4)
2. Remove stub shaft (3).

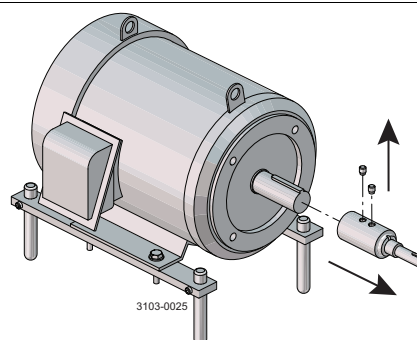

## 4 Maintenance

*Study the instructions carefully.*


*The items refer to the parts list and service kits section.*

*Handle scrap correctly.*

### 4.3 Dismantling of pump MR-185US and MR-200US


#### Step 1

Remove covers (2a).

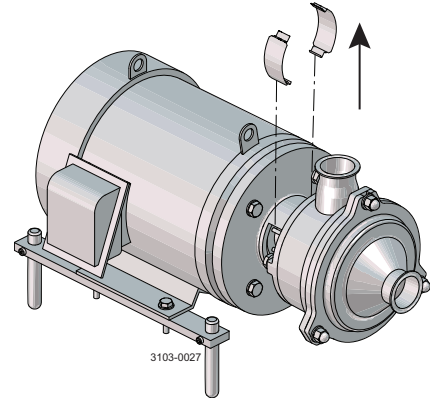


#### Step 2

Remove cap nuts (14), washers (15a) and casing cover (10).

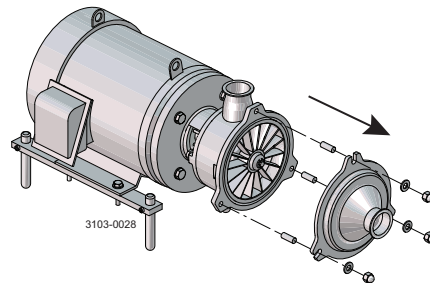


#### Step 3

Remove O-ring (8) from pump casing (9).

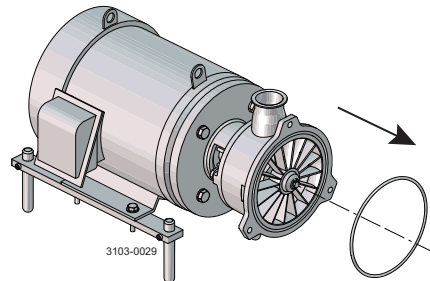


#### Step 4

1. Remove impeller nut (13) **counterclockwise**, (counterhold stub shaft (3)).
2. Remove impeller (11) from the stub shaft.

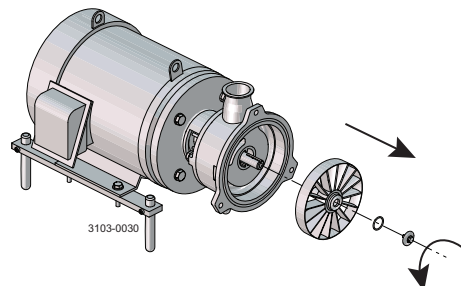

#### Step 5


Turn stationary seal ring (28) **clockwise** and remove it from pump casing (9) (use the tool supplied).

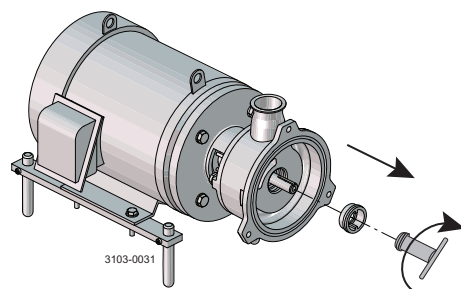

*Study the instructions carefully.  
The items refer to the parts list and service kits section.  
Handle scrap correctly.*

### Step 6

Remove O-ring (29) from stationary seal ring (28).

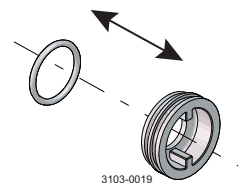


### Step 7

Remove rotating seal ring (27), spring (25) and O-ring (26) from stub shaft (3).


#### NOTE!

If necessary, place a screwdriver through the hole in pump casing (9) and push the seal parts out.

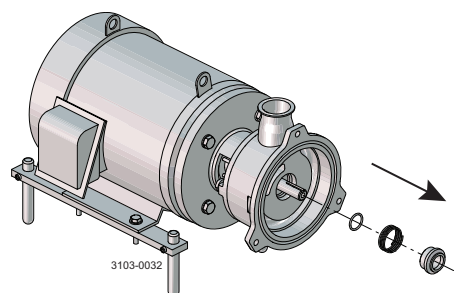


### Step 8

1. Remove screws (6) and washers (7).
2. Remove adaptor (2) together with pump casing (9).

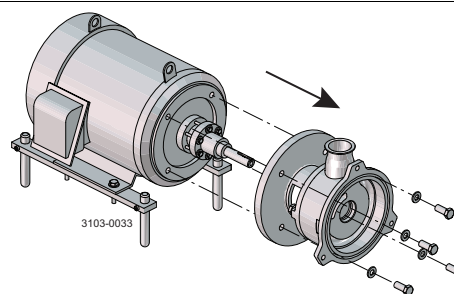


### Step 9

1. Remove screws (16) and washers (17).
2. Remove pump casing (9) from adaptor (2).

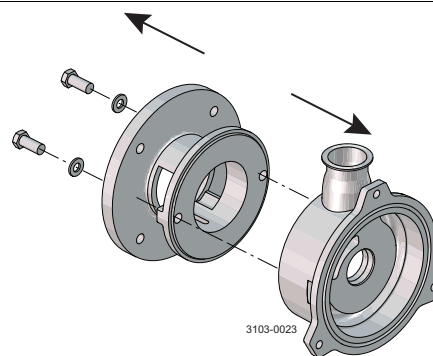

### Step 10

Remove thrower (24) from stub shaft (3).

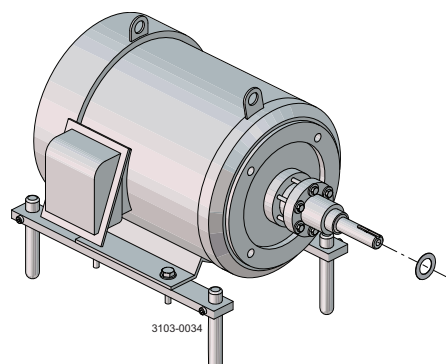

## 4 Maintenance

---

*Study the instructions carefully.*


*The items refer to the parts list and service kits section.*

*Handle scrap correctly.*

---


### Step 11

1. Loosen screws (5).
2. Remove stub shaft (3) together with compression rings (4a+b).

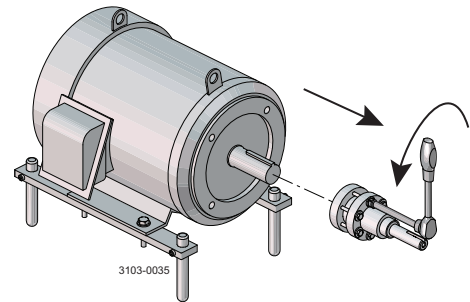

### Step 12

Remove screws (5), washer (5a) and compression rings (4a+b) from stub shaft (3).

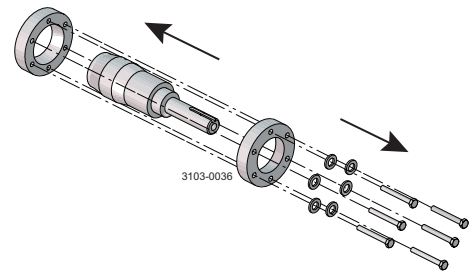


Study the instructions carefully. The items refer to the parts list and service kits section. Lubricate the rubber seals before fitting them.

### 4.4 Assembly of pump MR-166US


#### Step 1

1. Fit stub shaft (3) on the motor shaft.
2. Check the clearance between the end of the stub shaft and the motor flange 0.39-0.78 inch.

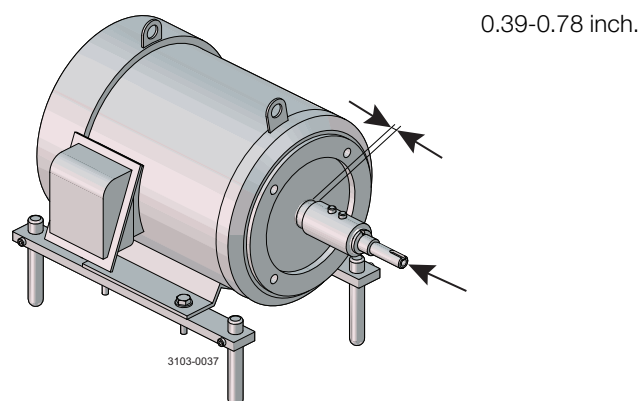


#### Step 2

1. Tighten screws (4) lightly and evenly.
2. Ensure the screws go into the keyway of the motor shaft.
3. Ensure that the stub shaft (3) can be moved on the motor shaft.

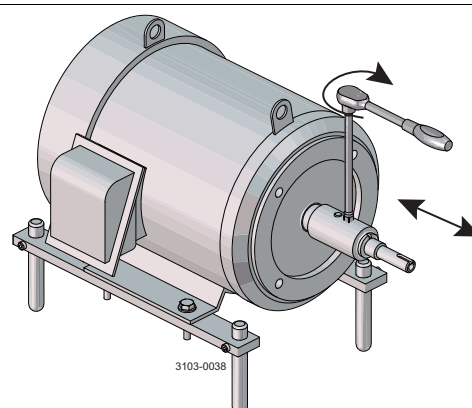


#### Step 3

1. Fit pump casing (9) on bracket (2).
2. Fit washers (41) and screws (40).
3. Tighten the screws.

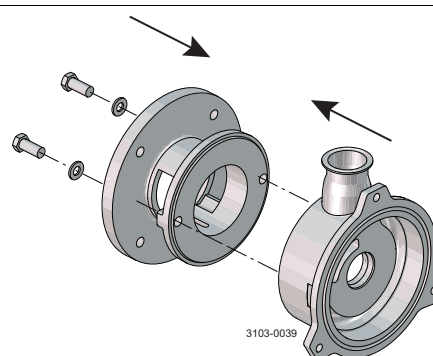

#### Step 4

1. Fit bracket (2) on the motor.
2. Fit washers (46) and screws (45).
3. Tighten the screws.

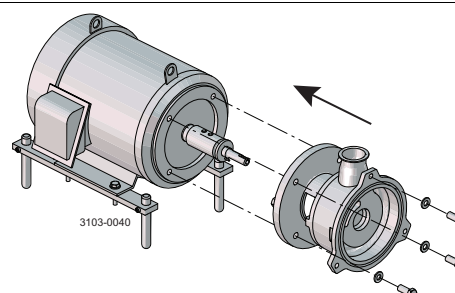


## 4 Maintenance

Study the instructions carefully. The items refer to the parts list and service kits section. Lubricate the rubber seals before fitting them.


### Step 5

1. Fit impeller (11) on stub shaft (3).
2. Fit impeller nut **counterclockwise** (13) on the shaft and tighten lightly.

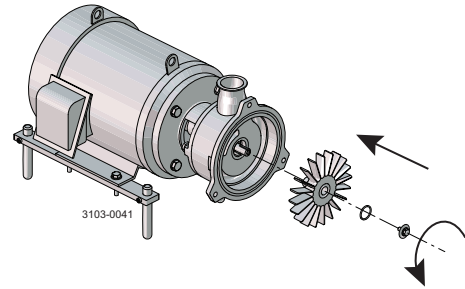

### Step 6


Ensure that the clearance between impeller (11) and pump casing (9) is 0.0078-0.012 inch. (tap gently with a plastic hammer).

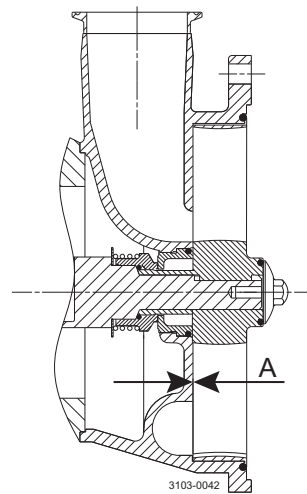

A = 0.0078-0.012 inch.


### Step 7

Remove impeller (11), pump casing (9) and bracket (2) without moving stub shaft (3) on the motor shaft.

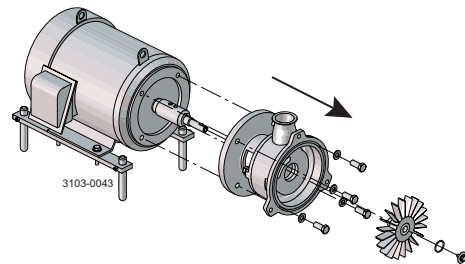

### Step 8

Torque tighten screws (4) evenly to 11.05 lbf-ft.

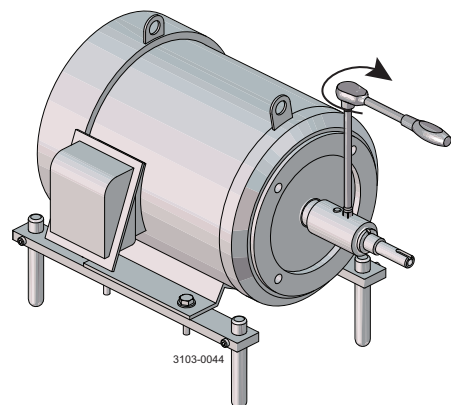




Study the instructions carefully. The items refer to the parts list and service kits section. Lubricate the rubber seals before fitting them.

### Step 9

1. Fit thrower (21) on stub shaft (3).
2. Fit bracket (2) together with pump casing (9) on the motor.
3. Fit washers (46) and screws (45).

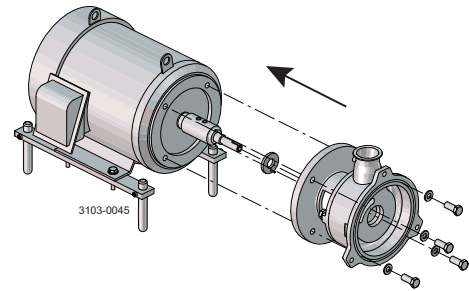


### Step 10

#### CAUTION!


Ensure that the notch in the seal ring is opposite the driving pin on thrower (21).

1. Fit spring (24), spacer ring (25) and washer (26) on the stub shaft.
2. Lubricate O-ring (27) and fit it on the stub shaft.
3. Fit rotating seal ring (28) on the stub shaft.

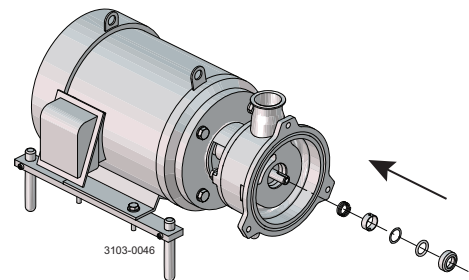


### Step 11

1. Fit O-ring (30) on stationary seal ring (29).
2. Fit the seal ring in pump casing (9), turn it **clockwise** and tighten (use the tool supplied).

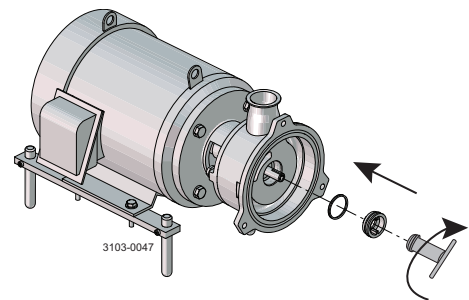

### Step 12


1. Place key (12) in the groove of stub shaft (13).
2. Fit impeller (11) on the shaft.
3. Fit and tighten impeller nut (13) **counterclockwise** on the shaft.
4. Check that the clearance between the impeller and the pump casing (9) is 0.0078-0.012 inch. (adjust if necessary).

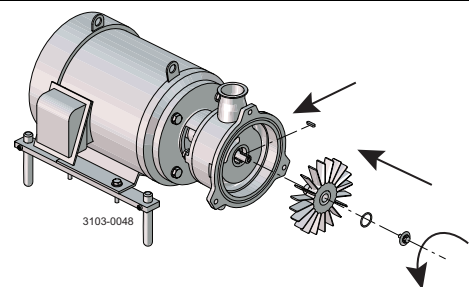

### Step 13

1. Fit O-ring (8) in pump casing (9).
2. Fit casing cover (10).
3. Fit washers (15a) and cap nuts (14).
4. Tighten the cap nuts firmly.
5. Ensure that impeller (11) rotates smoothly (see section 1.2).

**Note!** Pay special attention to warnings.

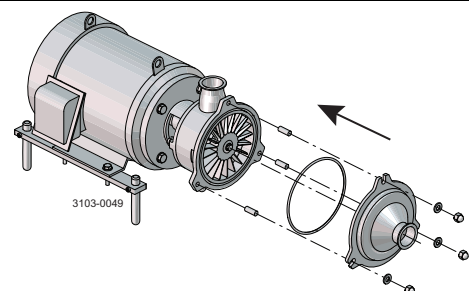

## 4 Maintenance


---

*Study the instructions carefully. The items refer to the parts list and service kits section. Lubricate the rubber seals before fitting them.*

---

### Step 14

Fit covers (2a)

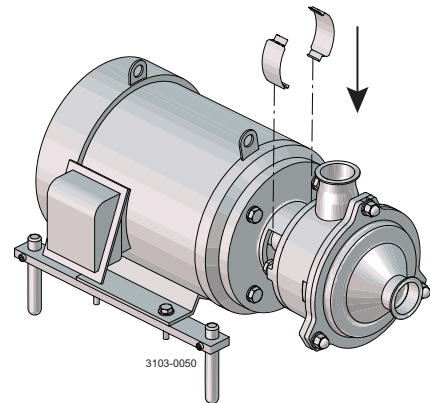


Study the instructions carefully. The items refer to the parts list and service kits section. Lubricate the rubber seals before fitting them.

### 4.5 Assembly of pump MR-185US and MR-200US


#### Step 1

Fit compression rings (4a+b), screws (5) and washer (5a) correctly on stub shaft (3).

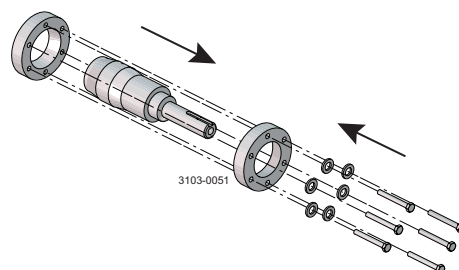


#### Step 2

1. Fit stub shaft (3) on the motor shaft.
2. Check the clearance between the end of the stub shaft and the motor flange 0.39-0.78 inch.

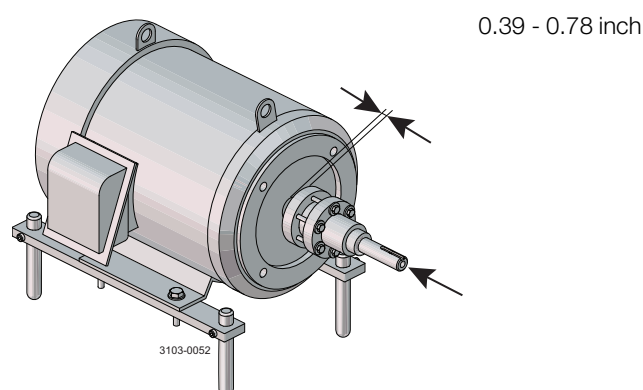


#### Step 3

1. Tighten screws (5) lightly and evenly.
2. Ensure that stub shaft (3) can be moved on the motor shaft.

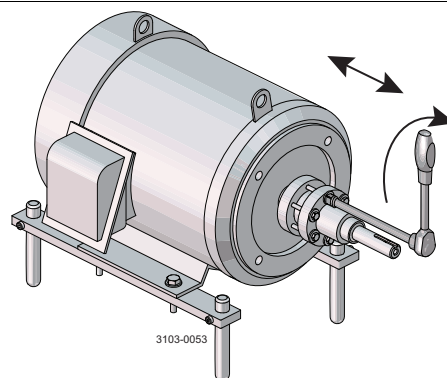

#### Step 4

1. Fit pump casing (9) on adaptor (2).
2. Fit washers (17) and screws (16).
3. Tighten the screws.

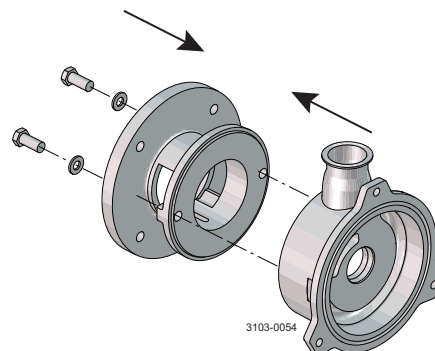


## 4 Maintenance

Study the instructions carefully. The items refer to the parts list and service kits section. Lubricate the rubber seals before fitting them.


### Step 5

1. Fit adaptor (2) on the motor.
2. Fit washers (7) and screws (6).
3. Tighten the screws.

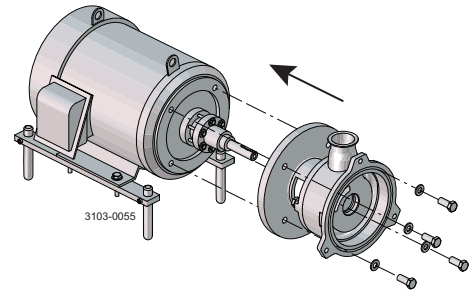


### Step 6

1. Fit impeller (11) on stub shaft (3).
2. Fit impeller nut (13) **clockwise** on the shaft and tighten lightly.

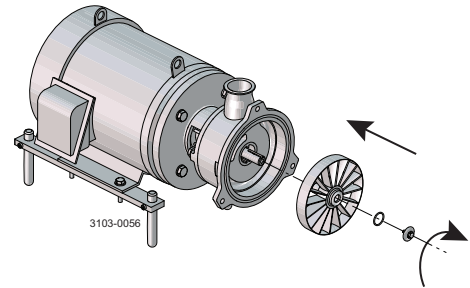

### Step 7


Ensure that the clearance between impeller (11) and pump casing (9) is 0.0056-0.0078 inch. (tap gently with a plastic hammer).

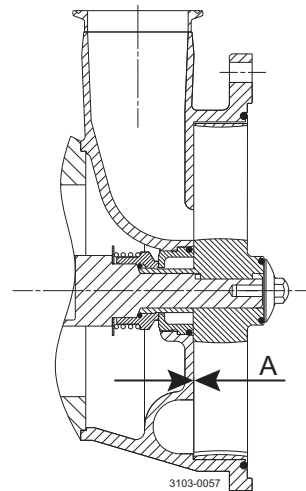

A = 0.0056-0.0078  
inch.

### Step 8


Remove impeller (13), pump casing (11) and adaptor (2) without moving stub shaft (3) on the motor shaft.

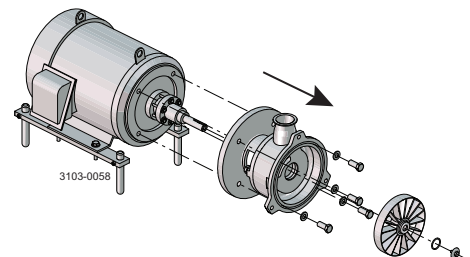

Study the instructions carefully. The items refer to the parts list and service kits section. Lubricate the rubber seals before fitting them.


### Step 9

Torque tighten screws (5) evenly to 11.05 lbf-ft (counterhold stub shaft (3)).

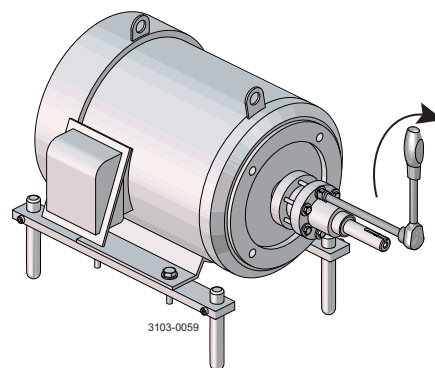


### Step 10

1. Fit thrower (24) on stub shaft (3).
2. Fit adaptor (2) together with pump casing (9) on the motor.
3. Fit washers (7) and screws (6).

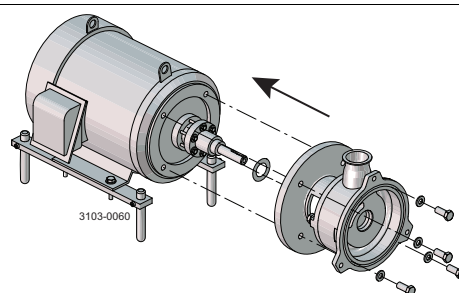


### Step 11

1. Lubricate O-ring (26) and push it on stub shaft (3) and position it correctly.
2. Place spring (25) on rotating seal ring (27).
3. Push the seal ring over the O-ring as far as possible against the shoulder.

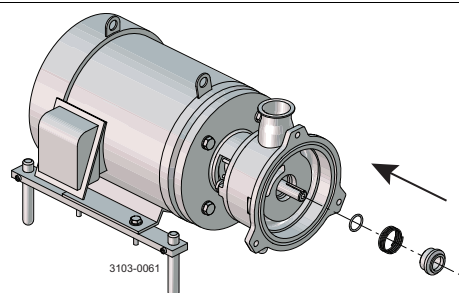


### Step 12

1. Fit O-ring (29) on stationary seal ring (28).
2. Fit the seal ring in pump casing (9), turn **counterclockwise** and tighten (use the tool supplied).

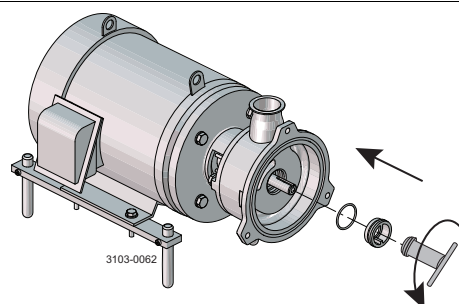

### Step 13

1. Fit impeller (11) and impeller nut (13) on the shaft.
2. Tighten the nut **clockwise**.

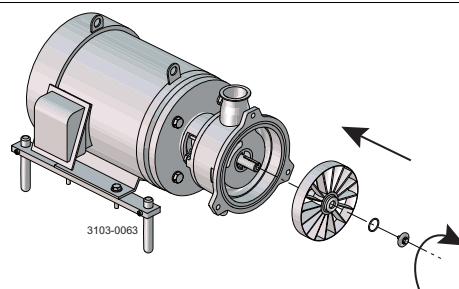


## 4 Maintenance

*Study the instructions carefully. The items refer to the parts list and service kits section. Lubricate the rubber seals before fitting them.*


### Step 14

1. Fit O-ring (8) in pump casing (9).
2. Fit casing cover (10).
3. Fit washers (15a) and cap nuts (14).

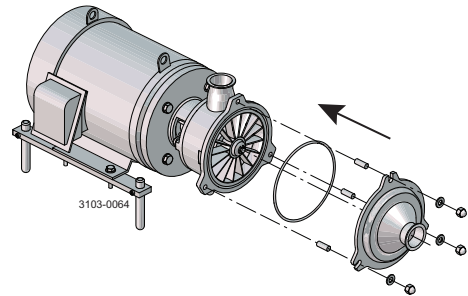

### Step 15

Fit covers (2a).

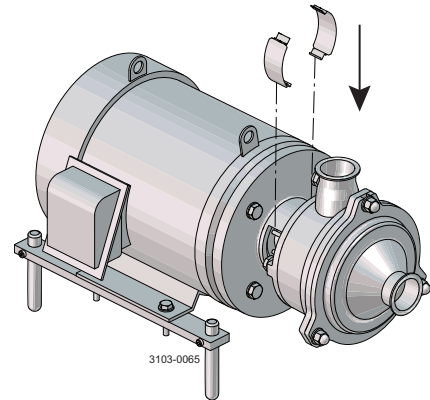

## 4.6 Cleaning Procedure

### Cleaning Procedure for Soiled Impeller Screw Tapped Hole:

1. Remove stub shaft (3) per section 5 of Service manual.
2. Submerge and soak Stub Shaft for 5 minutes in COP tank with 2% caustic wash
3. Scrub the blind tapped impeller screw hole vigorously by plunging a clean 1/2" diameter sanitary bristle pipe brush in and out of the hole for two minutes while submerged.
4. Soak Stub Shaft (3) in acid sanitizer for 5 minutes, then scrub blind tapped hole as described in step 3 above.
5. Rinse well with clean water and blow-dry blind tapped hole with clean air.
6. Swab test the inside of the tapped hole to determine cleanliness.
7. Should the swab test fail, repeat steps 2 thru 6 above until swab test is passed.

Should swab testing continue to fail, or time is of the essence, install a new (spare) Stub Shaft (3).

*It is important to observe the technical data during installation, operation and maintenance.  
Inform the personnel about the technical data.*

### 5.1 Technical data

<b>Data</b>	
Max. inlet pressure	58 psi
Temperature range	14°F to +284°F (EPDM)
<b>Materials</b>	
Product wetted steel parts	AISI 316L
Other steel parts	Stainless steel
Adaptor	Cast iron, zinc sprayed and coated with two-component laquer
Product wetted seals	EPDM (standard)
Alternative seals	Nitrile (NBR) and flourinated rubber (FPM)
Finish	Standard blasted
<b>Shaft seal</b>	
Seal type	Mechanical single seal
Material, stationary seal ring	Acid resistant steel, duplex grade (standard) or acid resistant steel, duplex grade with sealing surface of silicon carbide*
Material, rotating seal ring	Carbon (standard) or silicon carbide*
Material, O-rings	EPDM (standard)
Alternative material, O-rings	Nitrile (NBR) and flourinated rubber (FPM)
<b>Motor</b>	
Standard foot-flanged motor according to Nema standard	
4 pol = 1800 rpm. at 60 Hz	
IP55 (with drain holes with labyrinth plug), insulation class F	
Voltage and frequency	3~, 60 Hz; 270/460 V
<b>NEMA motors (Hp)</b>	
Motor sizes, 60 Hz	3 (MR-166US)
Motor sizes, 60 Hz	7.5 (MR-185US)
Motor sizes, 60 Hz	15 (MR-200US)
* Only MR-185US and MR-200US.	

## 5 Technical data

---

*It is important to observe the technical data during installation, operation and maintenance.  
Inform the personnel about the technical data.*

---

### 5.2 Torque Specifications

---

Below table specifies the tightening torques for the screws, bolts and nuts in this pump.  
Always use below torques if no other values are stated. This can be a matter of personal safety.

Size	Tightening torque	
	Nm	lbf-ft
M8	20	14.8
M10	40	29.5
M12	67	49.0
M14	110	81.0

---



*It is important to observe the technical data during installation, operation and maintenance.  
Inform the personnel about the technical data.*

### 5.3 Noise emission

Pump Type	Sound pressure level (dBA)
LKH-5	60
LKH-10	69
LKH-15	72
LKH-20	70
LKH-25	74
LKH-35	71
LKH-40	75
LKH-45	70
LKH-50	75
LKH-60	77
LKH-70	88
LKH-75	79
LKH-85	86
LKH-90	75
LKH-112	70
LKH-113	69
LKH-114	68
LKH-122	75
LKH-123	77
LKH-124	80
SolidC-1	68
SolidC-2	72
SolidC-3	73
SolidC-4	72
MR-166	76
MR-185	82
MR-200	81
MR-300	82
GM	54
FM-OS	61

The above LKH noise levels are the same for LKHFPF, LKHFI, LKH UltraPure, LKH Evap, LKH Hex.  
The above SolidC noise levels are the same for SolidC UltraPure.

The noise measurements have been carried out with original motor and shroud, approximately at the Best Efficiency Point (BEP) with water at ambient temperature and at 50 Hz.


Very often the noise level generated by the flow through the process system (e.g. valves, pipes, tanks etc.) is much higher than what is generated by the pump itself. Therefore it is important to consider the noise level from the total system and take the necessary precautions with regards to personal safety if required.

## 6 Parts list and service kits

*The drawings show MR-166US, -185US, -200US and include all items.*

### 6.1 Drawings MR-166US

For further information see parts list section 6.3

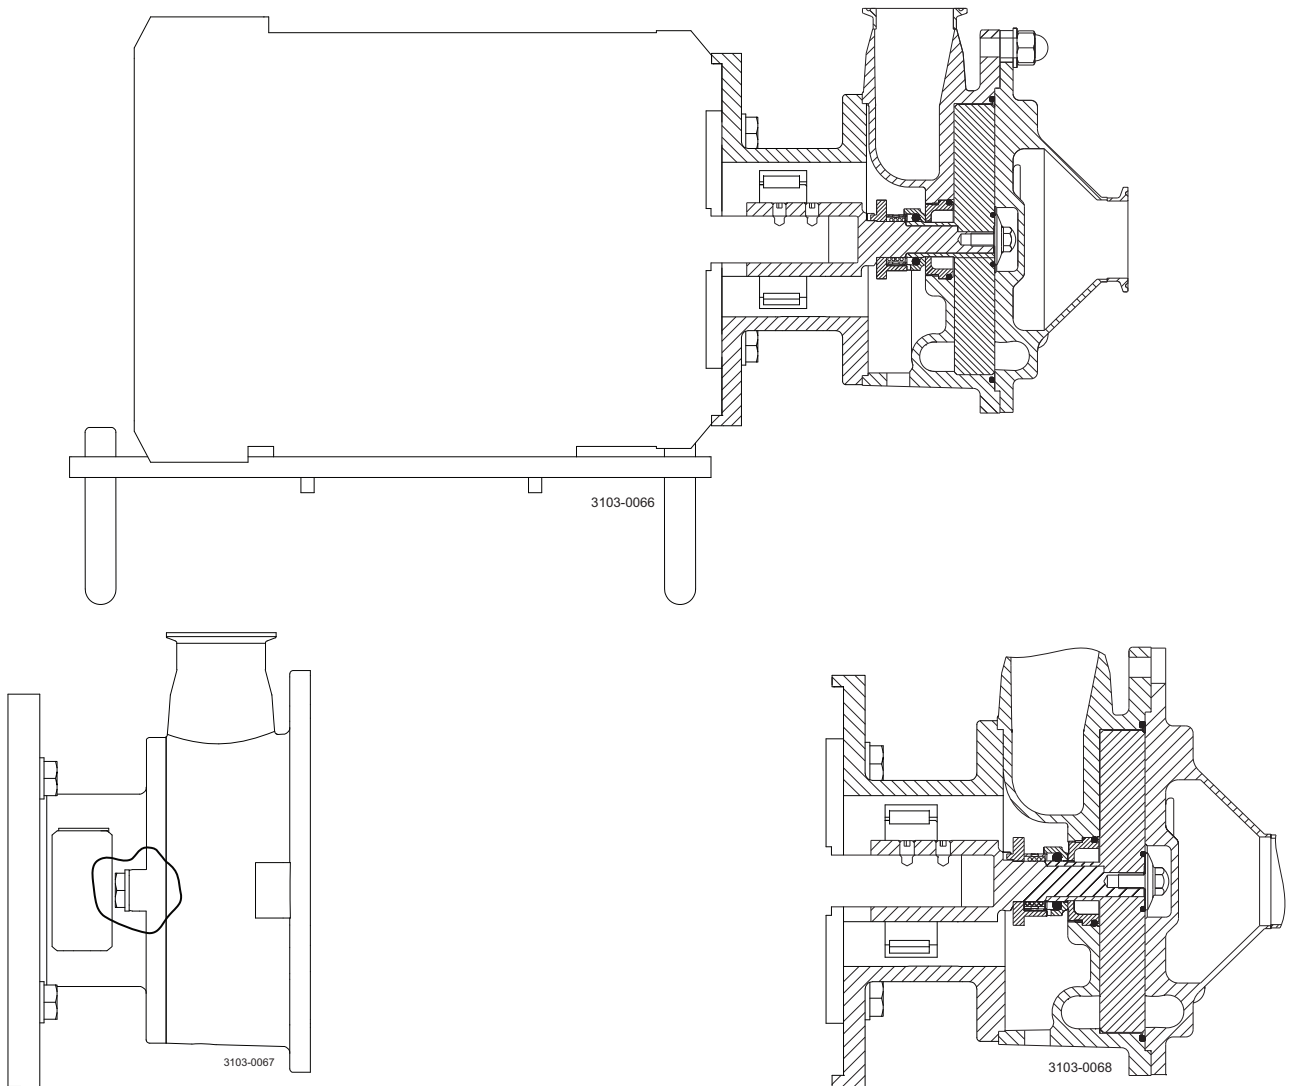


## 6 Parts list and service kits

The drawings show MR-166US, -185US, -200US and include all items.

### 6.2 Drawings MR-185US, -200US


For further information see parts list section 6.4

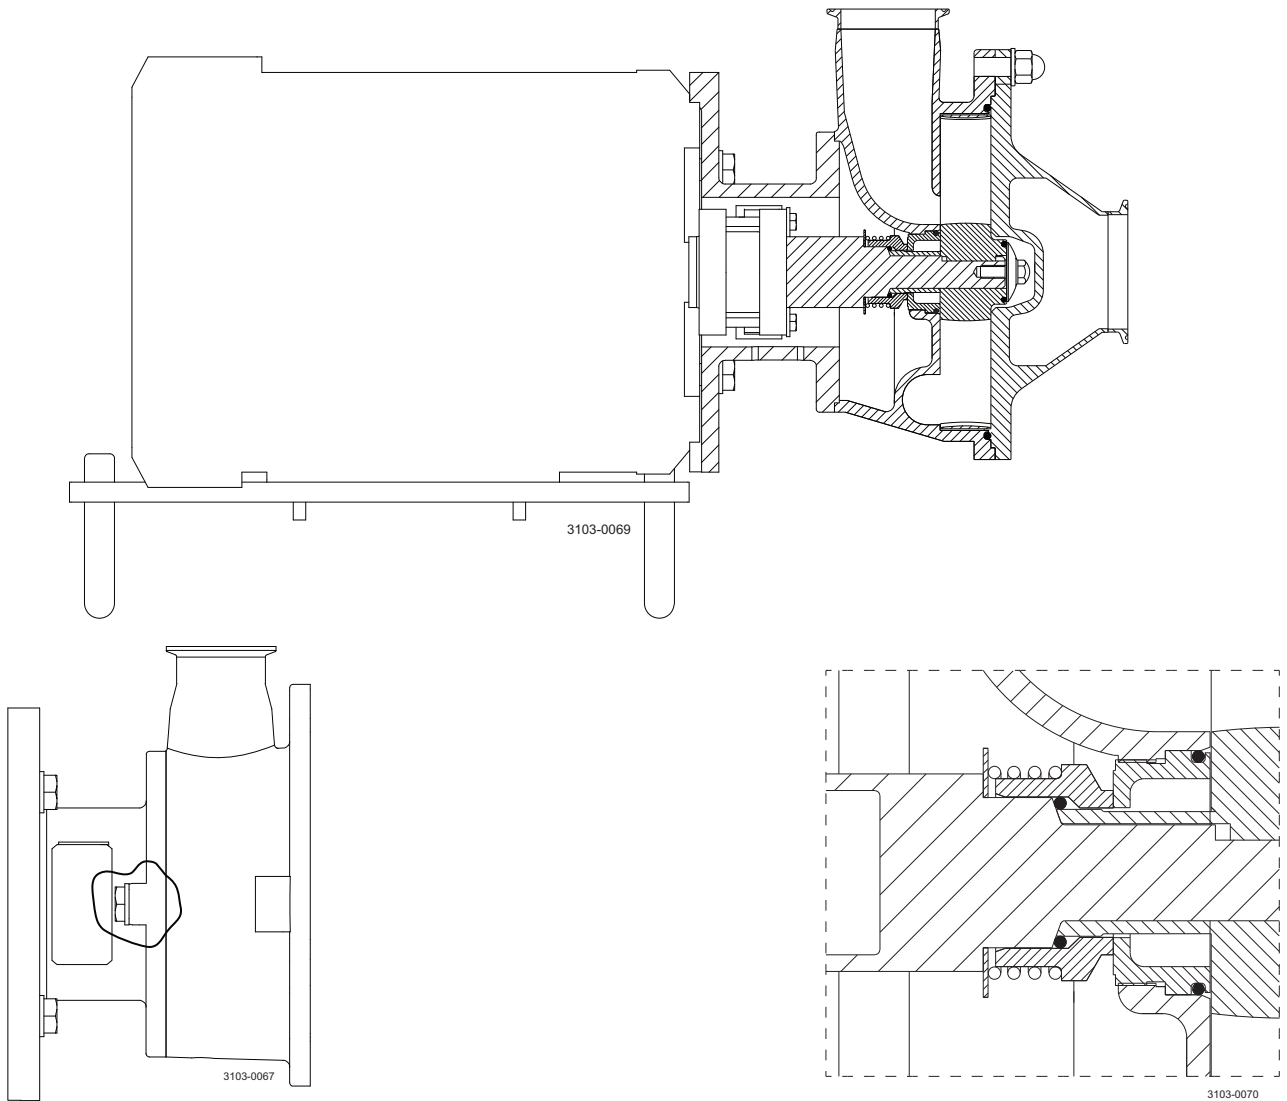

## 6 Parts list and service kits

The drawings show MR-166US and include all items.

### 6.3 MR-166US

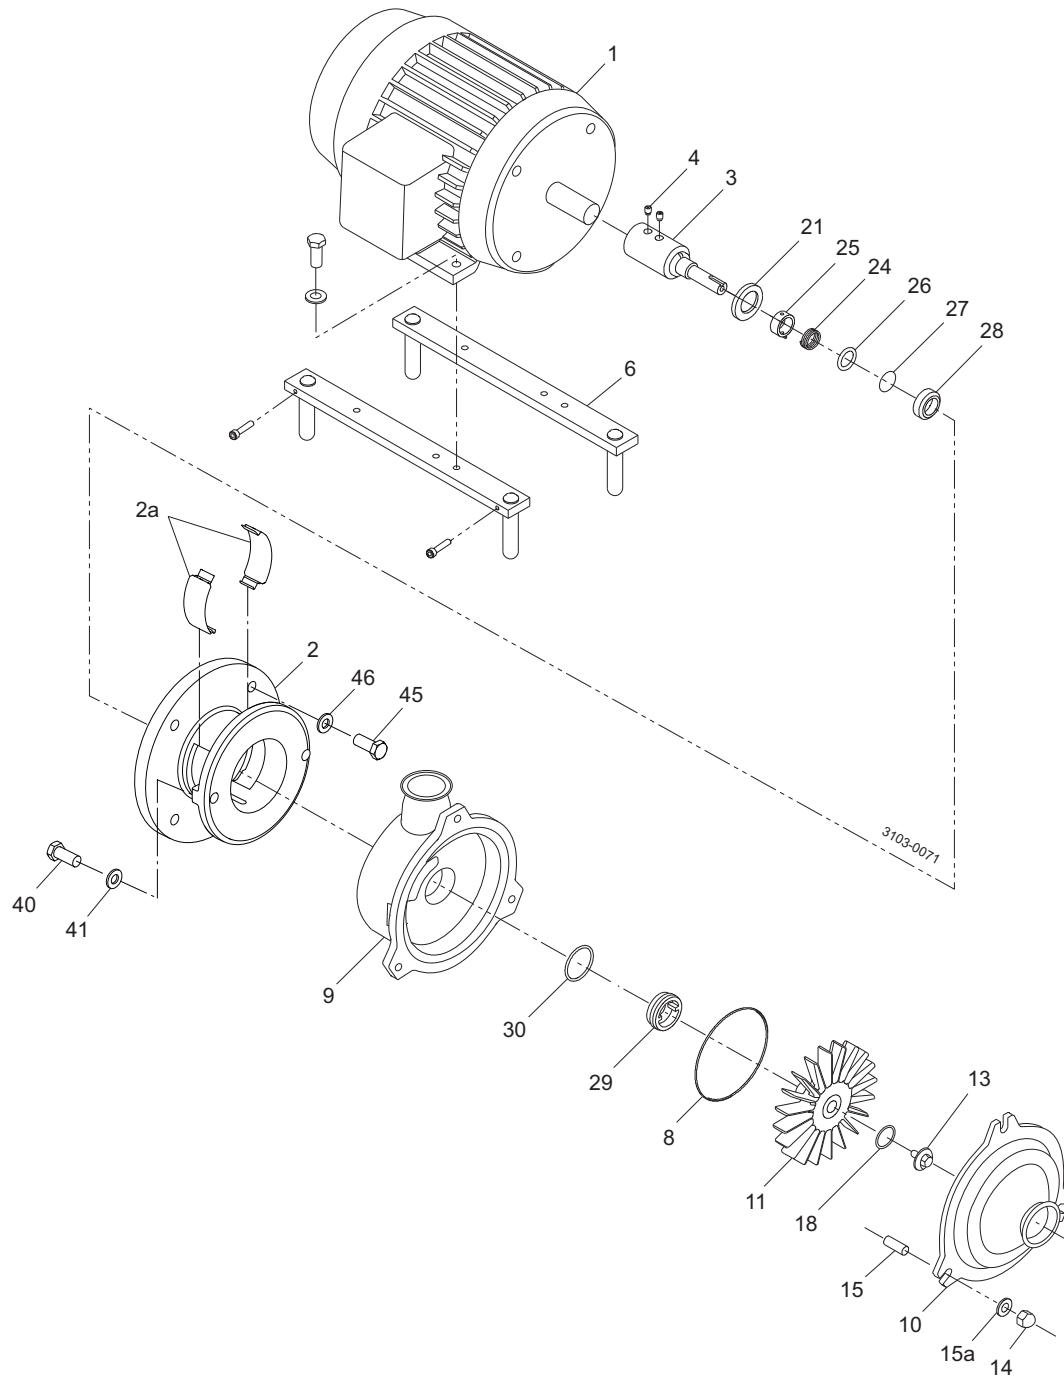

## 6 Parts list and service kits

The drawings show MR-166US and include all items.

### Parts list

Pos.	Qty	Denomination
1	1	Motor 3 Hp
2	1	Bracket
2a	2	Bracket cover
3	1	Shaft
4	2	Screw
6	1	Bracket set stainless steel
8 ▲	1	O-ring
9	1	Pump casing
10	1	Casing cover
11	1	Impeller
13	1	Impeller screw
14	3	Cap nut
15	3	Stud bolt
15a	3	Washer
18 ▲	1	O-ring for impellerscrew
21	1	Thrower
24	1	Spring
25	1	Spacer ring
26	1	Washer
27	1	O-ring
28	1	Rotating seal ring
29	1	Stationary seal ring
30	1	O-ring
40	2	Screw
41	2	Spring washer
45	4	Screw
46	4	Washer


### Service kits

Denomination	C/SS
Service kit, EPDM.....	9611-92-1946
Service kit, NBR .....	9611-92-1947
Service kit, FPM.....	9611-92-1948

## 6 Parts list and service kits

The drawings show MR-185US, -200US and include all items.

## 6.4 MR-185US, -200US

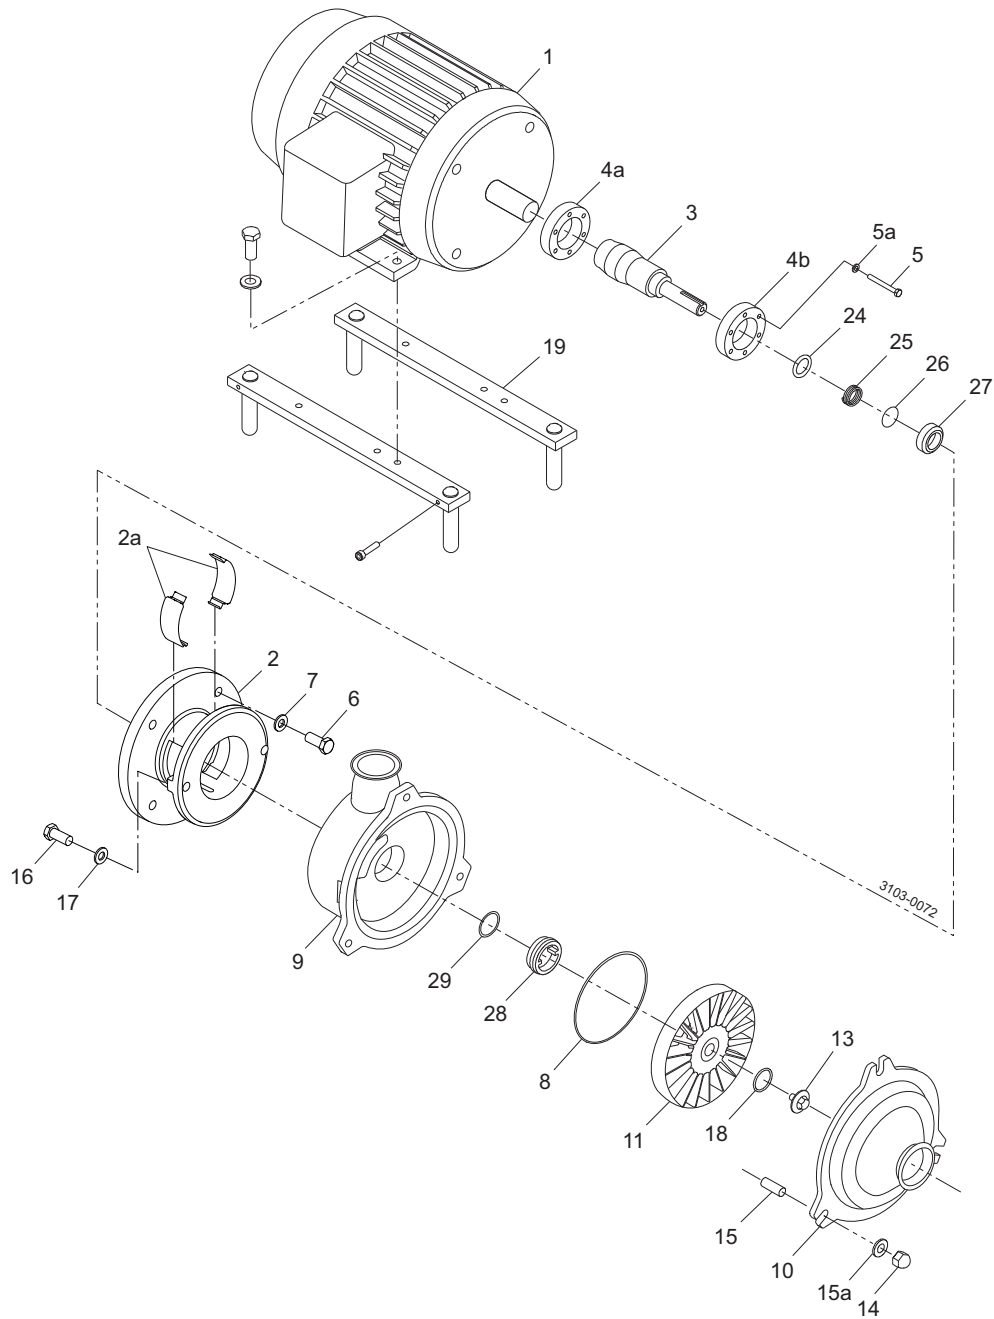

## 6 Parts list and service kits

The drawings show MR-185US, -200US and include all items.

### Parts list

Pos.	Qty	Denomination
	1	Spanner for stationary seal ring
	1	Shaft seal
1 ▲	1	Motor
2	1	Bracket
2a	2	Bracket cover
3	1	Shaft
4a	1	Compression ring
4b	1	Compression ring
5	6	Screw
5a	6	Washer
6	4	Screw
7	4	Washer
8 ▲◎	1	O-ring
9	1	Pump casing
10	1	Casing cover
11	1	Impeller
13	1	Impeller screw
14	3	Cap nut
15	3	Stud bolt
15a	3	Washer
16	2	Screw
17	2	Washer
18 ▲◎	1	O-ring for impellerscrew
19	1	Bracket set
24	1	Thrower
25	1	Spring
26	1	O-ring
27	1	Rotating seal ring
28	1	Stationary seal ring
29	1	O-ring

### Service kits

Denomination	C/SS	SIC/SIC
Service kit, EPDM.....	9611-92-1949	9611-92-1952
Service kit, NBR .....	9611-92-1950	9611-92-1953
Service kit, FPM.....	9611-92-1951	9611-92-1954

**How to contact Alfa Laval**

Contact details for all countries are continually updated on our website.

Please visit [www.alfalaval.com](http://www.alfalaval.com) to access the information directly.

© Alfa Laval Corporate AB

This document and its contents is owned by Alfa Laval Corporate AB and protected by laws governing intellectual property and thereto related rights. It is the responsibility of the user of this document to comply with all applicable intellectual property laws. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the expressed permission of Alfa Laval Corporate AB. Alfa Laval Corporate AB will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.